



Disassembly Guide



Step 1

Unhook the safety buckle at the back end of the seat pad.



Step 2

Remove the seat pad from the lower arch connectors on both sides.



Step 3

Fold the seat pad back to expose the reclining mechanism.



Step 4

Using a small screwdriver, push the silver pin inside the rectangular hole in the reclining mechanism, while pulling the white tube up and out. Repeat on other side.



Step 5

You have removed the seat pad from the bouncer base.



Step 6

Pull the seat pad gently up and away from the top arch connectors through the designated openings.



Step 7

Pull the head-rest tube down and take it out of the seat pad.



Step 8

The bouncer is now disassembled.