

Puzzle Guide



Farm Fun



Playground

Discovery Time Game

Mode 3

Developmental Benefits

- Thinking & Problem Solving
- Curiosity & Discovery
- Hand Eye Coordination
- Shape & Sound Recognition

Let's Get Ready:

- Make sure the puzzle is completed with all pieces in the tray
- Press the MODE button: "Mode 3!"

Time to Play:

- Each puzzle & puzzle key come with a unique **Discovery Time Game** (one game per puzzle)
- I-jig will provide prompts for the Discovery Time Game in each puzzle
- Here are some of the fun learning games to be found in Discovery Time:

Animal Catch

- I-jig will play an animal sound
- Find the correct animal and press the sound icon
- Correctly select five animals in a row to go the next round
- Each round gets faster, for added fun!

Mode 3 (continued) Discovery Time Game

Time to Play (continued):

Say & Do


- Press a sound icon and I-jig will give a command
Example: "Hop on one leg!"
- Play through all of the commands for active fun!

Simon Says

- I-jig will prompt "Simon says...." with a specific command
Press the correct sound icon, but be careful – don't do it if Simon doesn't say
- If you press the correct icon, the game continues
- If you press an incorrect icon, try again!

Sound Memory

- I-jig will play a series of sounds
- Press the correct sound icons to make the sounds in the same order
- If you press the correct icon, the game continues
- If you press an incorrect icon, try again!

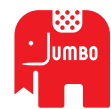

Colors and content may vary.



fisher-price.com

Please refer to the packaging of the batteries you have bought, for instructions and safety warnings. If the batteries run down, unscrew the panel of the back. Insert new batteries (3x 1,5V AAA (LR03)) and replace the lid. Please ensure the + end is on the correct side of the holder.



Requires 3 AAA (LR03 alkaline) 1,5V
Not Included

Dispose of batteries safely.

- Do not attempt to recharge non-rechargeable batteries.
- Remove rechargeable batteries from the game before being charged.
- Only recharge rechargeable batteries under adult supervision.
- Do not mix different battery types, or new and used batteries together.
- Only use batteries of the type mentioned in the rules.
- Always remove batteries when they are exhausted.
- Do NOT short-circuit the supply terminals under any circumstances.
- Batteries not included.

FISHER-PRICE and associated trademarks are owned by and used under license from Mattel, Inc. © 2013 Mattel, Inc. All Rights Reserved.

CONSUMER INFORMATION

 
Manufactured for & Distributed by Koninklijke Jumbo B.V.
Westzijde 184, 1506 EK Zaandam, The Netherlands.
Made in China. Visit: www.jumbo.eu



Warning: Not suitable for children under 36 months of age due to small parts.
Choking hazard. Please keep this box for future reference.



17936

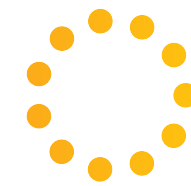

Parent Guide

LittlePeople® I-jig

Interactive Electronic Puzzle System



3+

Parent Guide

INTRODUCTION

A lifelong love of learning starts with play!

Encouraging curiosity and placing an emphasis on fun makes learning new concepts & skills easy and rewarding. Each child develops at a different pace and Fisher-Price™ Games enable children to learn and master ideas with confidence and joy.

I-jig is the unique interactive electronic puzzle system with three modes of learning and discovery for hours of engaging play.

Mode 1: Smart Puzzle


An interactive jigsaw puzzle that cues your child with encouraging phrases and fun sound effects to help him learn hand-eye coordination, objects and sounds.

Mode 2: Find & Seek Game

Your child will learn sound, object, color and counting skills. Each puzzle offers a unique set of exciting discoveries.

Mode 3: Discovery Time

Each puzzle & puzzle key come with a unique Discovery Time Game that enhances the joyful learning experience.

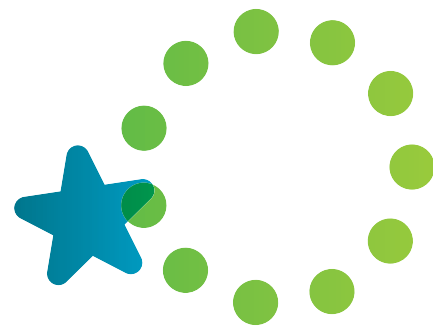

Fisher-Price


Game Set-up

Contents:

- Electronic I-jig System
- 2 x 24 piece jigsaw puzzles
- 2 x puzzle keys

Assembly:


- Using a Phillips-head screwdriver, open the battery box compartment located at the bottom of the unit
- Insert 3 new AAA batteries, as shown in the image
- Replace and close the battery box cover using the Phillips-head screwdriver

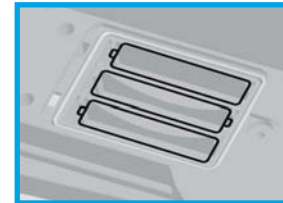

Getting Started:

- Place the I-jig unit on a tabletop or floor where your child can easily reach it
- Select either the red puzzle key or the yellow puzzle key
- Select the corresponding puzzle (the back of each puzzle is color coded to match the correct key)
- Locate the ON/OFF button, as shown

Note: If the unit is not in use for more than 10 minutes, it will automatically turn off to conserve battery life.

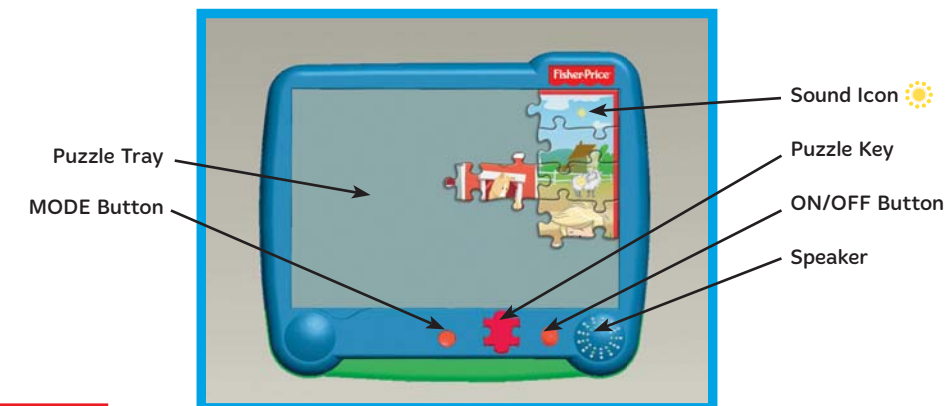

Fisher-Price

Smart Puzzle

Mode 1

Developmental Benefits

- Thinking & Problem Solving
- Curiosity & Discovery

Hand Eye Coordination

Shape & Sound Recognition

Let's Get Ready:

- Push the ON/OFF button to the "ON" position
- Insert the puzzle key
- Press the MODE button: "Mode 1!"

Time to Play:

- Start with the edges and press each puzzle piece, face up, onto the tray
- I-jig will help you complete the puzzle by giving prompts: "You did it!" or "Try again!"
- Hear fun sounds each time certain pieces are correctly placed together
Example: Complete the cow and press down on the sound icon to hear the cow say "Moo!"
- When the puzzle has been correctly completed, I-jig will play reward sounds!
- Once the puzzle is completed, press down on each of the sound icons to hear the sounds and names of each image (variations will depend on which puzzle has been selected)



Fisher-Price

Find & Seek Game

Mode 2

Developmental Benefits

- Thinking & Problem Solving
- Curiosity & Discovery

Hand Eye Coordination

Shape & Sound Recognition

Let's Get Ready:

- Make sure the puzzle is completed with all pieces in the tray
- Press the MODE button: "Mode 2!"

Time to Play:

- I-jig will ask interactive questions
Example: Touch the animal that says, "Moo!"
- Answer by pressing down on the correct sound icon
- If the correct icon is pressed, I-jig will say "You did it!"
- If the incorrect icon is pressed, I-jig will say, "That's the ____, try again!"



Fisher-Price